Octagon One Plus Portable Alarm Clock Desk Light Quick User Manual





Thank you for purchasing the Gingko Octagon One Plus Portable Alarm Clock Desk light. Please read the instruction manual carefully to achieve the best performance of this product. For any further queries, please feel free to get in touch with us at support@gingkodesign.co.uk

PRODUCT CHARGING INSTRUCTION

- 1. Please fully charge the product before first time use with the USB cable provided.
- 2. The USB 5V charging port is located at one side of the Hexagon base and please connect the USB charging cable to any USB charging adapter or USB

port to charge the product, i.e. a mobile phone USB charger or a laptop USB port, as long as its ouput is not more than 5V. See right side diagram.

3. When charging, the Indication light will be flashing in blue and stay in blue when it's fully charged.

WARNING: Please DO NOT use any USB adapter which is more than 5V output to charge the product as this may eventually damage this product.



PRODUCT TOUCH BUTTON INTRODUCTION

Long Touch: 3-5 seconds; Short Touch: 0-1 second

A short touch to turn on the light or adjust the light intensity (total 4 intensities).

U : A long touch to turn on or turn off the clock display on the

hexagon base.



SET: A long touch to access to the setting menu to set up the time and clock display mode. A short touch to confirm the setting and exit the setting menu after the settina.

+: a short touch to change the hour format, scroll up the number or change the clock display mode when in setting menu.

(1): A long touch to turn on or turn off alarm. A short touch to check current the alarm time set.

PRODUCT OPERATING INSTRUCTION

Note: The light and clock function work independently. So you don't need to turn on the clock in order to have the light work or to turn on the light in order to make the clock work.

- Turn On or Tun Off the Light

- 1. A short touch or tap of light button 🔅 will turn on the light. See diagram as below.
- 2. Keep touching or tapping the light button to choose your preferred light intensity (total in 4 different intensities).
- 3. Tapping or touching the light button 3 again when the light on its 4th intensity will switch off the light.
- 4. To turn the light back again, follow the same steps as above.



- 12/24 Hour Format, Time and Sound Activated/Permanent Clock Display Setting

- 1. A long touch on the **SET** button for 3-5 seconds until a beep to access to the setting menu and either **24H** or **12H** display will flash on the display screen.
- 2. A short touch or tap on the + button to select your preferred hour format, then a short touch or tap on the SET button to confirm and the **HOUR** number will flash.
- 3. Touch the + button to scroll up the hour number and set your preferred hour time, then short touch the **SET** button to confirm and the **MINUTE** number will flash.
- 4. Short touch the + to scroll up the minute number and set your preferred minute time, then short touch **SET** button to confirm and the screen should show **oN:Sd** or **--:Sd**:
- oN:Sd stands for the clock will be set in sound activated display, in this setting, the clock display will automatically switch off when the room is quiet or while you're sleeping and display only light up again if you give a gentle touch or tap on the table, or even just a sharp click of your fingers.
- --:Sd stands for the clock will be set in permanent display; in this setting, the clock display will stay on permanently.
- 5. Touch the \pm to select your preferred clock display mode between **oN:Sd** and **-:Sd**, then touch SET to confirm and exit the setting menu.

NOTE: the setting menu will be automatically logged out after 20 seconds if there isn't any touch operation followed from the previous touch. You should restart the setting again if that happens before you finish the setting.

Alarm Setting

Note: The clarm can be set as a normal beep alarm to wake you up, or as a light alarm; when it's set as a light alarm, the light will gradually turn itself on and wake you up naturally by the light instead of the beep sound.

- 1. the alarm is turned off in the default setting. To turn it turn, a long touch on the alarm button (2) and you should hear a beep, then it shows the default alarm time 7:00am.

 2. To charge the alarm time, a long touch on the SET button while the clock is on the alarm time display, then the clorm HOUR number will flash.
- 3. A short touch on the —button to scroll up the number or leave your finger on the button will scroll up the number quickly; after select your preferred alarm hour, short touch **SET** button to confirm then the alarm **MINUTE** number will flash.
- A. Follow step 3 to select your preferred alarm MINUTE, then touch **SET** button to confirm and the screen display should show - **bb** or - **lb**
- - **bb** stands for the clock is set as a beep alarm, so the alarm will go off with a beep sound to wake you up.
- -- Lb stands for the clock is set as a light alarm, so the light will gradually turn itself on to wake you up naturally by the light instead.
- 5. A short touch on the + button to change - **bb** or - **Lb** and select your preferred alarm system then short touch the **SET** button to confirm and exit the alarm setting.
- 6. When the alarm is set and turned on, there will be a dot display at the right bottom of the clock display screen indicating the alarm is turned on; To turn off the alarm, a long touch on the alarm button with a beep sound and the clock display should show OFF and the dot display will disappear.

-Snooze Instruction

When the glarm is set as beep glarm

- 1. To snooze when the alarm goes off, just touch any of these touch control buttons.
- 2. It will go to snooze for 5 minutes, total in 5 times. If no snooze is required, simply long touch any of these 5 buttons.

When the alarm is set as light alarm

1. You can't snooze when the alarm is set as light alarm. The light will gradually light up in 5 minutes to its 3d level brightness and stay on for 30 minutes. It will turn itself off after 30m.

LOW BATTERY INDICATION

You may not be able to turn on the light when the battery is low and it will make a beep sound when you touch the light button. However, the clock should still work for a few more days until the battery runs out. It's **Highly Recommended** to charge the product as soon as possible when the light can't be turned on due to a low battery.

PRODUCT USE ANGLE

This clever design allows you to have the light to be placed at the below angles (please note the clock display number doesn't tilt though)









PRODUCT CARE & WARRANTY

- 1. This product is made from natural solid wood and it's NOT recommended to place it in any humid space such as a steaming room or humid or wet bath room.
- 2. Any drop from a high table or shelf could seriously damage the clock. Please place it at a safe table surface.
- 3. Please do not use any USB charging adapter which is more than 5V output to charge the product as it may eventually damage the battery and shorten its battery life-span. It may also invalidate your manufacturer warranty.
- 4. A natural wood grain on this product is perfectly normal because this product is made of 100% natural wood. We do not accept such faulty claim because of the natural wood grain.
- Do not disassemble this product without manufacturer instruction as this may damage this product and invalidate your manufacturer warranty.
- 6. Any damage caused by user error such a a drop etc is not covered by our warranty policy.
- 7. The product comes with one year manufacturer warranty, to register your warranty, please go to www.gingkodesign.co.uk

Octagon One Plus TM



To discover more unique and elegant Gingko Design, please visit

www.gingkodesign.co.uk

Copyright @ Gingko Design Ltd

All rights are registered and protected Alle Rechte sind eingetragen und geschützt Todos los derechos están registrados y protegidos

> support@gingkodesign.co.uk Printed in China







